


2. Install the belt in the following order.

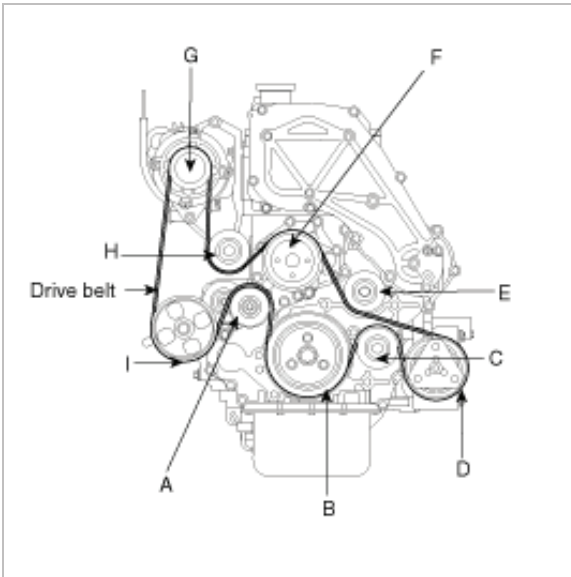


A. Install the belt in RH side of the auto-tensioner pulley.

Auto-tensioner pulley(A) → Crankshaft pulley(B) → Idler(C) → Air conditioner compressor pulley (D)→ Idler(E)
→ Water pump pulley(F)

B. Install the belt in LH side of the auto-tensioner pulley.

Auto-tensioner pulley(A) → Power steering pump pulley(I) → Alternator pulley(G)

C. Loosen the belt tension by turning the auto-tensioner clockwise (about 39°), and then install the belt on the idler between the alternator pulley and the water pump pulley.

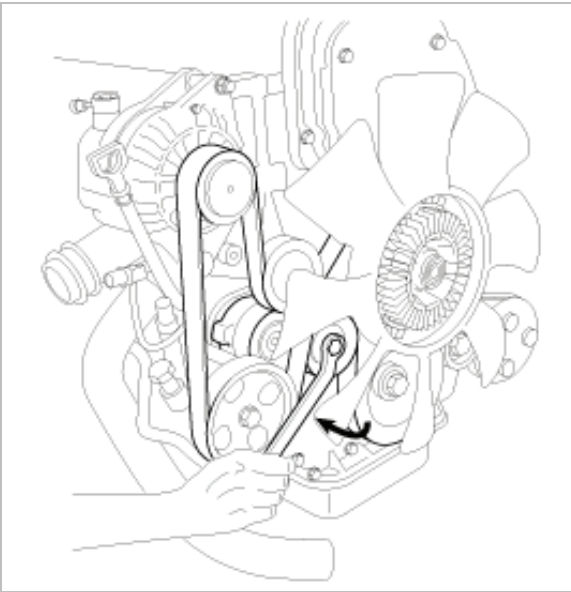

3. The tensioner mark should be between the " * " position.
If not, replace the belt.

