





## REMOVAL AND INSTALLATION

1. Disconnect negative battery cable.
2. Remove door inner handle cover.

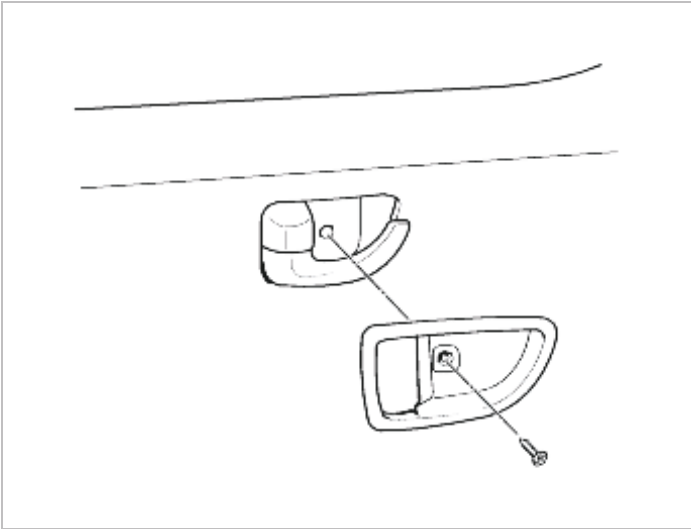


- (1) Remove door inner handle cover screw (1).
- (2) Remove inner handle cover.

3. Remove outside rearview mirror garnish.
  - (1) Remove garnish from door frame.

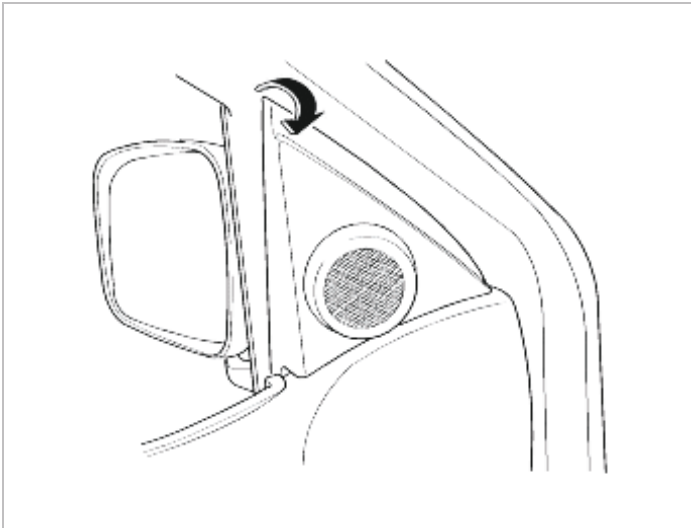

- (2) Disconnect electrical connector.


4. Remove assist grip cover. (only passenger side)

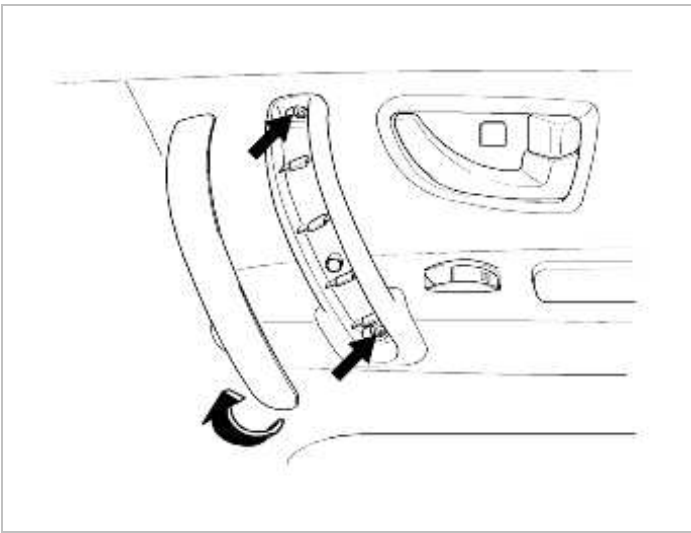

(1) Remove assist grip cover.

(2) Remove screws (2).

#### 5. Remove door trim.

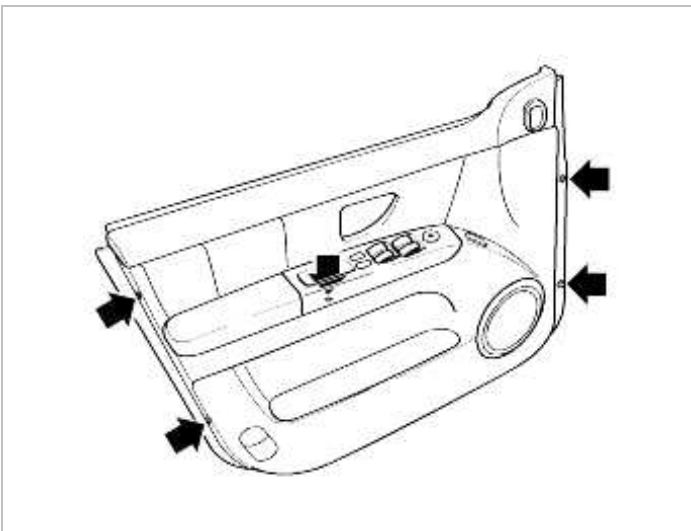


(1) Remove door pull handle screw (1).

(2) Remove door trim fasteners (4).

(3) Disconnect electrical connector.

#### 6. Door inner handle and pull handle bracket.

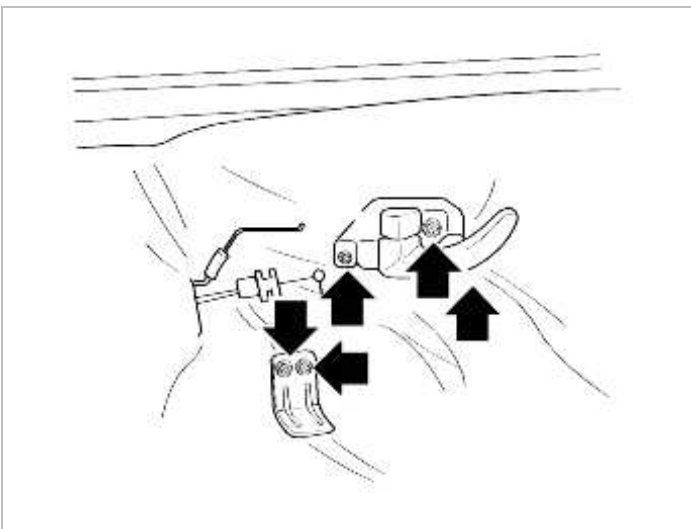

(1) Remove door lock rod.

(2) Remove inner handle bracket screws (3).

(3) Remove pull handle bracket screws (2).


7. Remove outside rearview mirror folding control unit.

(1) Remove screw (1).

(2) Disconnect electrical connector.

8. Remove door speaker.

(1) Remove door speaker screws (3).

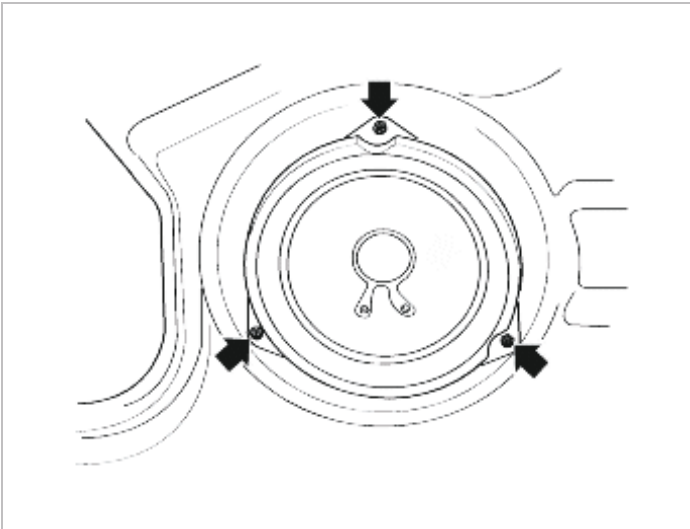


(2) Disconnect electrical connector.

9. Remove door screen.

**NOTICE**

Peel door screen off carefully so that it can be reused.

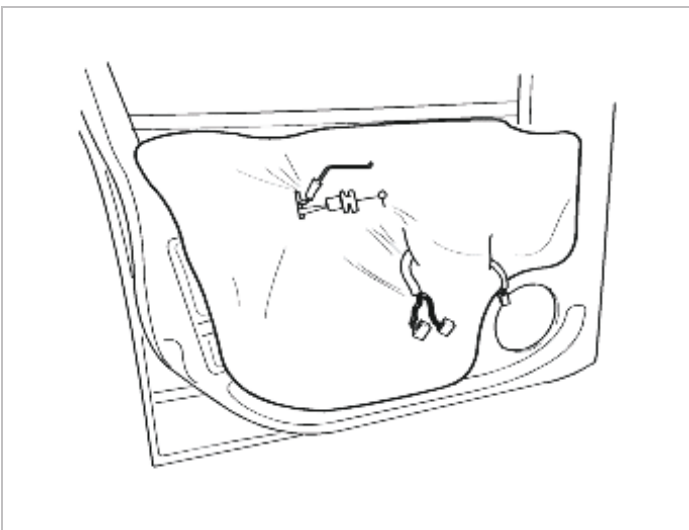

10. Remove window glass.


(1) Reconnect power window switch connector.

(2) Connect negative battery cable.

(3) Turn ignition switch "ON" and position window glass bolt access hole.

(4) Turn ignition switch "OFF".

(5) Remove glass run channel.

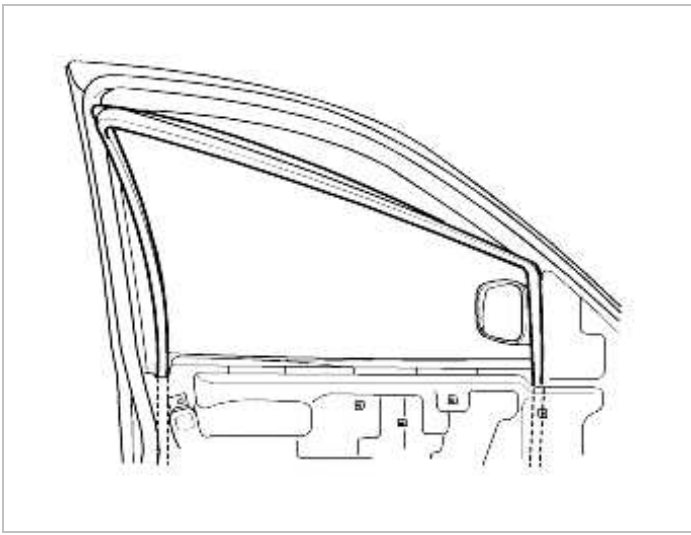


(6) Remove window glass grip bolts (2).

---

Tightening torque :  
8-12 N·m (0.8-1.2 kg·m, 6-9 lb·ft)

---

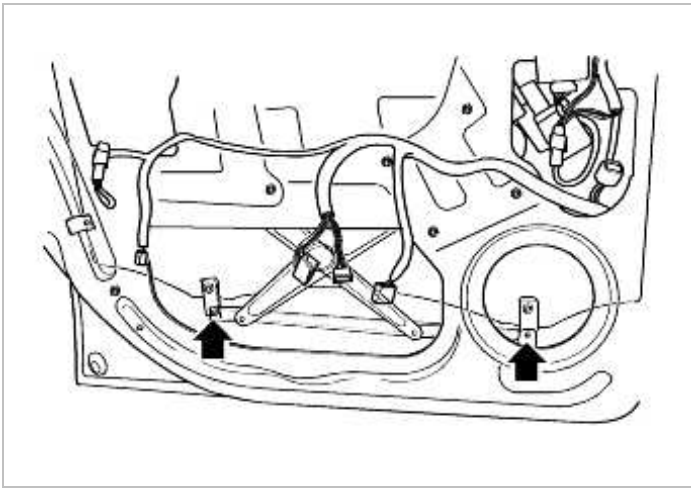

(7) Disconnect negative battery cable.


11. Remove window glass guide.

(1) Remove window glass guide (front) bolt (1) and nut (1).

---

Tightening torque :  
8-12 N·m (0.8-1.2 kg·m, 6-9 lb·ft)

---

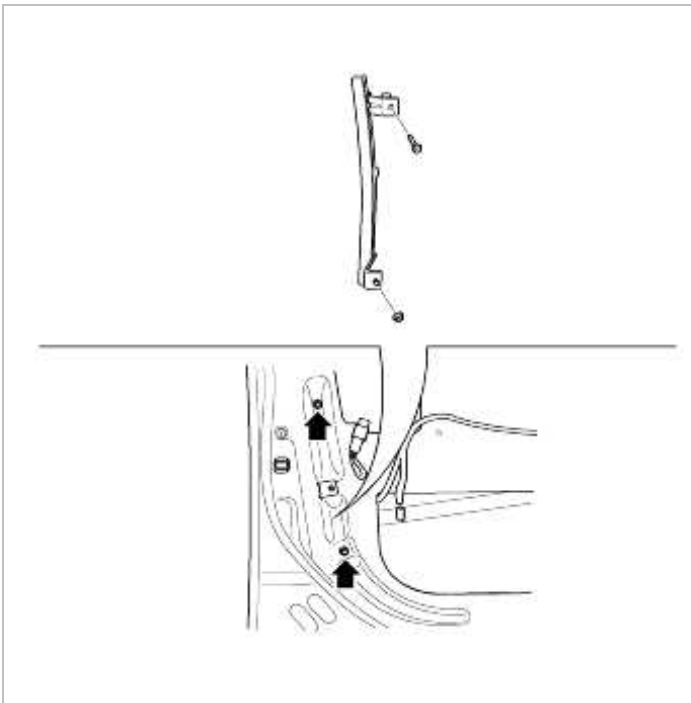


(2) Remove window glass guide (rear) bolt(1).

---

Tightening torque :  
8-12 N·m (0.8-1.2 kg·m, 6-9 lb·ft)

---

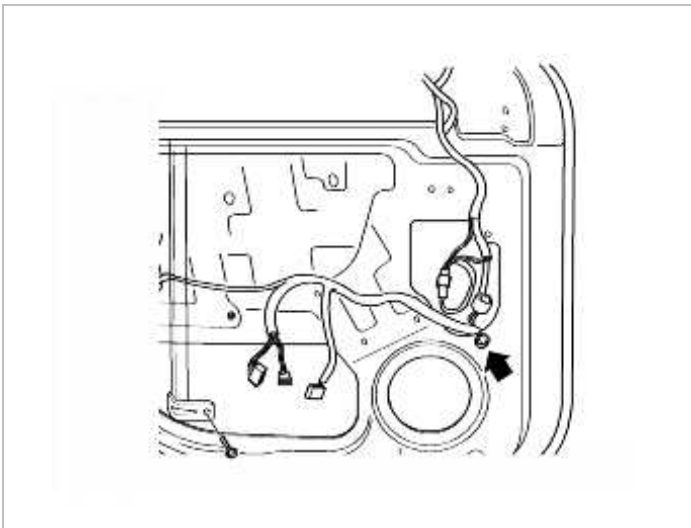


12. Remove power window regulator assembly.

(1) Remove power window regulator nuts (6).

---

Tightening torque :  
4-6 N·m (0.4-0.6 kg·m, 3-4 lb·ft)

---

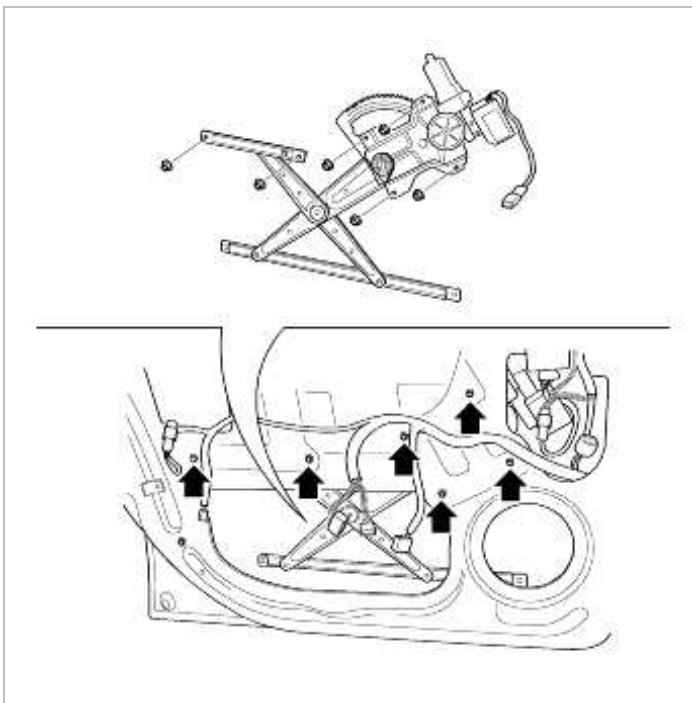

(2) Disconnect electrical connector.


13. Remove door outer handle and key set.

(1) Remove remote control rod.

(2) Remove door outer handle nuts (2) and bolt (1).

Tightening torque :

7-11 N·m (0.7-1.1 kg·m, 5-8 lb·ft)

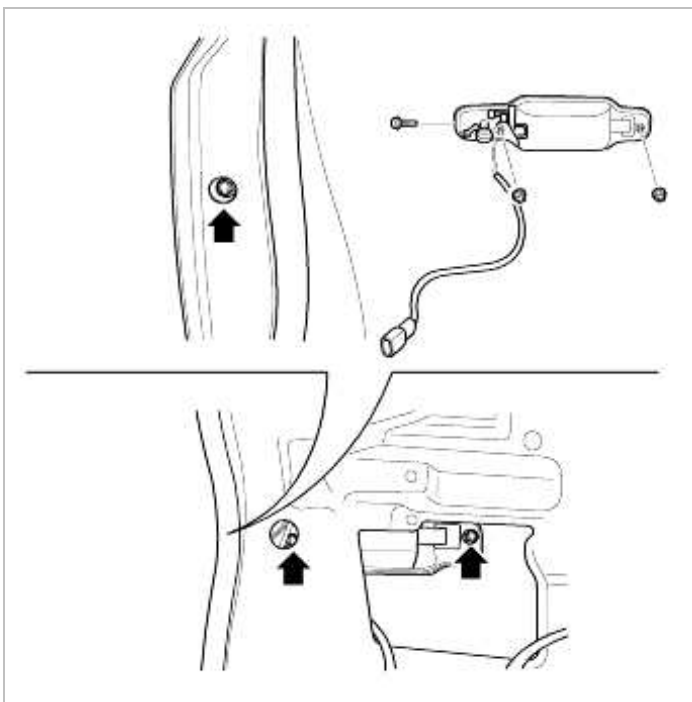

(3) Disconnect electrical connector.

14. Remove door latch assembly.


(1) Remove door latch screws (3).

Tightening torque : Door latch

4-6 N·m (0.4-0.6 kg·m, 3-5 lb·ft)

Tightening torque : Door striker

18-26 N·m (1.8-2.6 kg·m, 13-19 lb·ft)

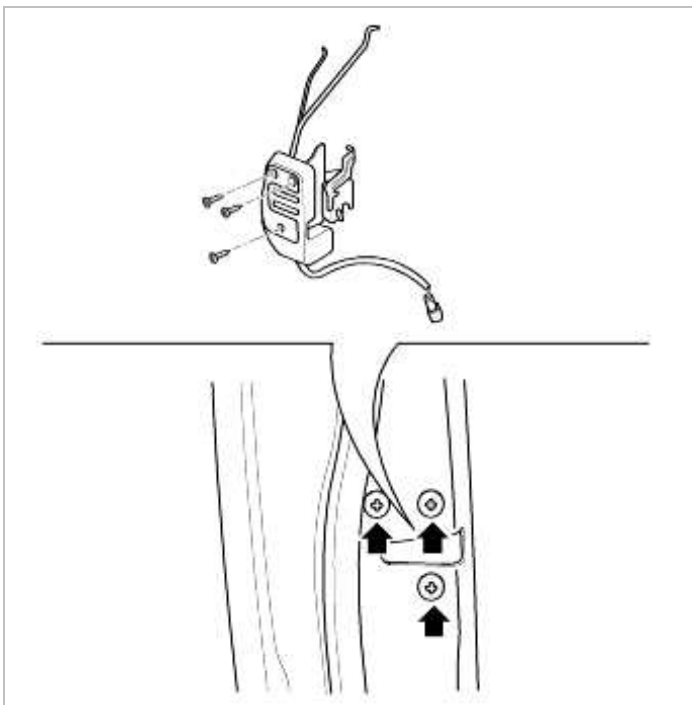

(2) Disconnect electrical connector.

15. Remove outside rearview mirror.


(1) Remove bolts (3) and clip.

---

Tightening torque :

5-7 N·m (0.5-0.7 kg·m, 4-5 lb·ft)

---

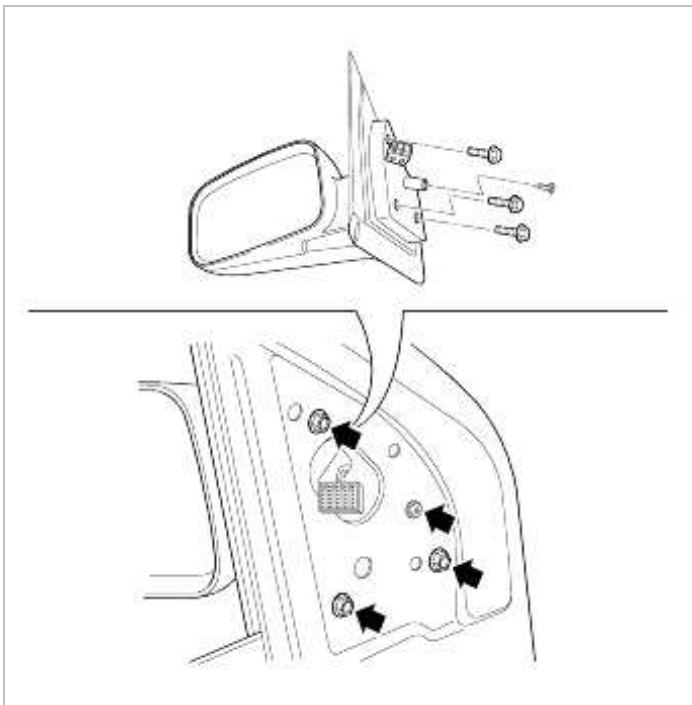

(2) Disconnect electrical connector.

16. Remove door outside belt weatherstrip.


(1) Remove door outside belt weatherstrip nut (1).

---

Tightening torque :

2.5-3.6 N·m (0.25-0.36 kg·m, 2-3 lb·ft)

---

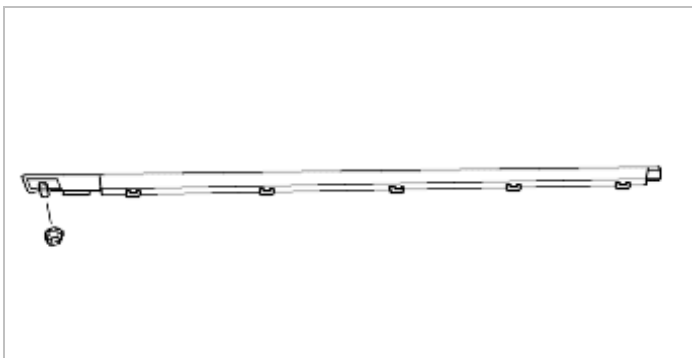

(2) Remove door outside belt weatherstrip from door frame.

17. Remove door wiring harness.


18. Remove door checker bolt(1) from body frame.

Tightening torque : Body side

22-27 N·m (2.2-2.7 kg·m, 16-20 lb·ft)

Tightening torque : Door side

9-13 N·m (0.9-1.3 kg·m, 7-9 lb·ft)

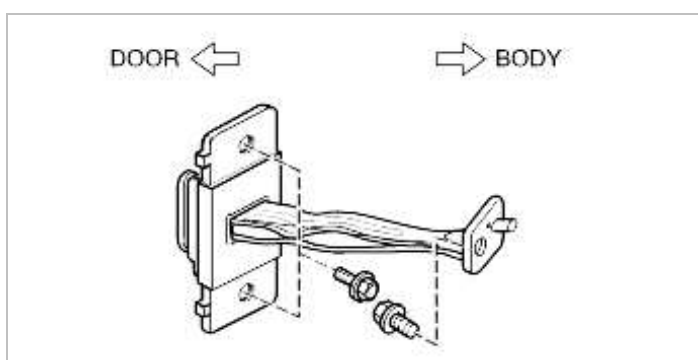


19. Remove door lower hinge bolts(2) and door upper hinge bolts(2) from body frame.

Tightening torque : Body side

35-42 N·m (3.5-4.2 kg·m, 25-30 lb·ft)

Tightening torque : Door side

18-30 N·m (1.8-3.0 kg·m, 13-22 lb·ft)

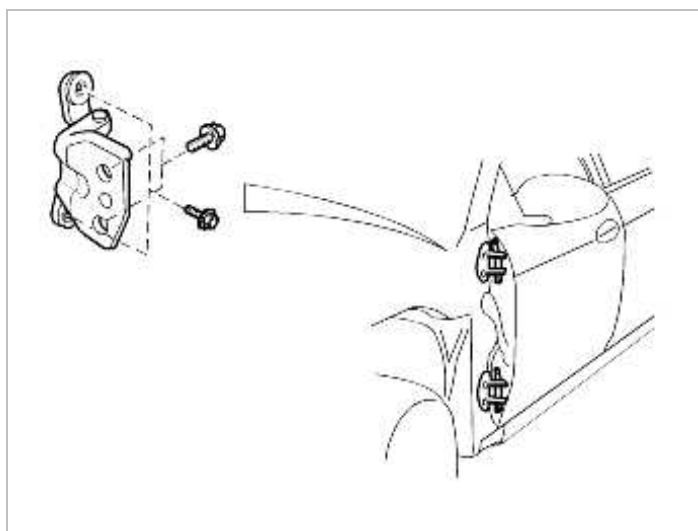

20. Install in reverse order of removal.

## ADJUSTMENT

### DOOR HINGE

1. Check that the door can be closed easily and that there is no play. If there is a problem, open the door and tighten the door hinge install bolts.